

IMPORTANT: READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- DO NOT INSTALL DAMAGED PRODUCT!

WARNING:

RISK OF ELECTRICAL SHOCK

- Turn off the electrical power at fuse or circuit breaker box before wiring fixture to power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- Make all electrical and grounded connections in accordance with the National Electrical Code and any applicable local code requirements.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION:

RISK OF INJURY


- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Ensure fixtures are properly secured to T-bar grid, ceiling, using wire, or aircraft cable capable of supporting 100 lbs. minimum.


CAUTION:

RISK OF FIRE

- Keep combustible and other materials that can burn away from luminaire and lamp/lens.
- MIN 90°C SUPPLY CONDUCTORS.


Recessed Mount



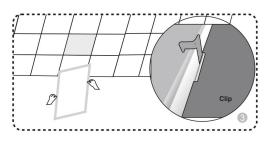




Clip is used for positioning (NOT for mounting)

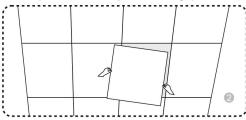

- 1.) Bend mounting clip by 90°, making it vertical to the rear cover of the flat panel fixture. (Fig. 1A) Bend the top part of the mounting clip 90° (Fig. 1B) and repeat on all clips.
- 2.) Turn off power and remove the ceiling panel. (Fig. 2)
- 3.) Select a lumen output and color temperature by sliding switch left or right respectively to the desired value. Place the panel into T-bar. Ensure the panel is attached to the ceiling. (Fig. 3)



<u>Surface Mount Installation</u> Surface mount kits sold separately:

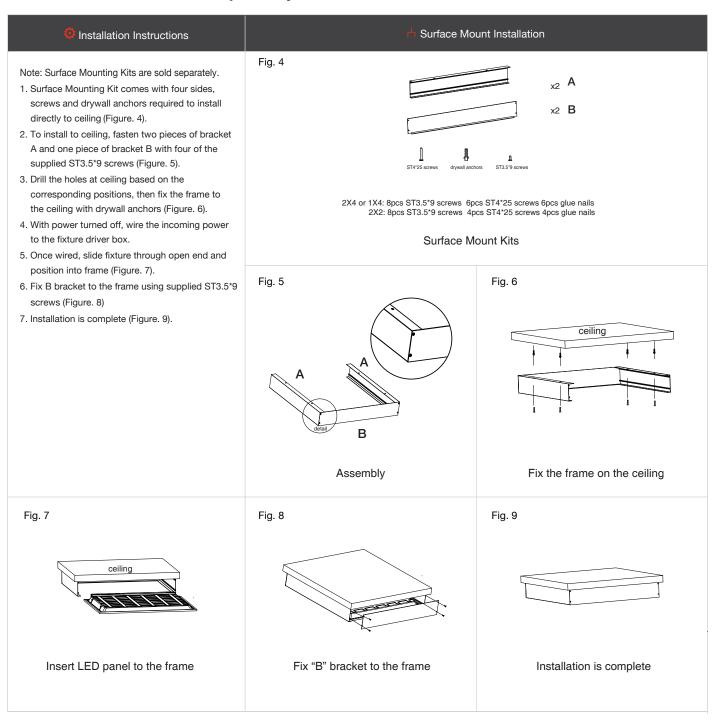

Warranty Information:


This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded. Visit www.halcolighting.com for full warranty details and compatibility information.



Flange Installation

Flange sold separately:


- **1.** For installation in drywall ceilings, cut an opening of the appropriate size, and then connect the panel light to incoming power.
- 2. Rotate the panel light by 45 degrees.
- 3. Pass the panel through the ceiling surface.
- 4. Lay in the panel light on the ceiling or grid.

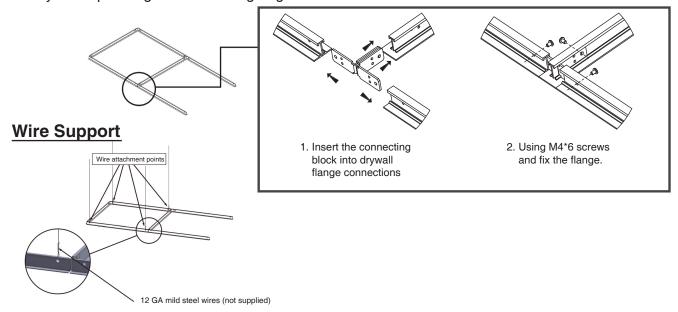


Installing the Junction Box Accessory

Note: Taller junction box to be purchased separately.

1. Unscrew M4 screw and remove the standard junction box cover.

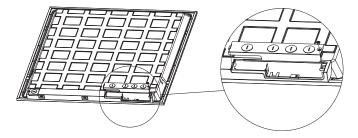

2. Fix the taller box cover properly with M4 screw.

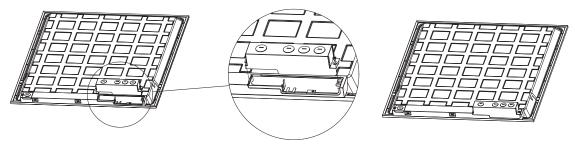



Operating Characteristic

Voltage input: 120-277V 50/60Hz Operating temp: -4°F to 104°F

**Consult with dimmer control manufacturer's wiring instructions.

▲ WARNING

Risk of fire or electric shock, installation requires knowledge of the lighting luminaires electrical systems. If not qualified, do not attempt installation and contact a qualified electrician.

Standard Wiring Diagram

